



## BS-36UFF/OM-148

REF#	PART#	PART NAME	REF#	PART#	PART NAME
1	20476444	Heat exchanger assembly (BS-36UFF Type A)	51	20476480	Screw B8
2	20476445	Heat exchanger assembly (BS-36UFF Type B & C, OM-148)	52	20476466	Nut B1
3	20476394	Burner gasket	53	20476422	Temp. selector knob
4	20476443	Baffle plate (BS-36UFF Type A)	54	20476476	Lamp circuit board
5	20476423	Baffle plate (BS-36UFF Type B & C, OM-148)	55	20476481	Screw B9
6	20476393	Heat exchanger gasket	56	20476437	Blower motor
7	20476350	Insulator	57	20476419	Fuel pump (BS-36UFF)
8	20476442	Burner assembly (BS-36UFF)	58	20476619	Fuel pump (OM-148)
9	20476642	Burner assembly (OM-148)	59	20476418	Igniter transformer
10	20476472	O-ring (P12. 5)	60	20476411	Flame sensor (BS-36UFF)
11	20476478	Quick fastener	61	20476611	Flame sensor (OM-148)
12	20476479	Water supply pipe (BS-36UFF Type A)	62	20476420	Temperature fuse
13	20476424	Water supply pipe (BS-36UFF Type B & C, OM-148)	63	20476426	Fuel nozzle (BS-36UFF)
14	20476473	Thermistor	64	20476626	Fuel nozzle (OM-148)
15	20476406	High limit switch	65	20476425	Electrode (BS-36UFF)
16	20476407	Empty burning preventive electrode	66	20476625	Electrode (OM-148)
17	20476460	Top panel (BS-36UFF)	67	20476497	Fuel strainer (BS-36UFF Type A)
18	20476660	Top panel (OM-148)	68	20476487	Fuel strainer (BS-36UFF Type B & C, OM-148)
19	20476463	Right side panel	69	20476482	Screw B10
20	20476485	Air pressure switch	70	20476470	Nut B2
21	20476464	Left side panel (BS-36UFF Type A)	71	20476455	Insulating cloth cover
22	20476414	Left side panel (BS-36UFF Type B & C, OM-148)	72	20476448	O-ring (P70A)
23	20476412	Main circuit board	73	20476449	O-ring (P70B)
24	20476417	Transformer	74	20476439	Burner top (BS-36UFF)
25	20475535	Power supply cord	75	20476639	Burner top (OM-148)
26	20476446	Front panel (BS-36UFF)	76	20476483	Water supply bleeder screw
27	20476646	Front panel (OM-148)	77	20476409	Exhaust pipe adapter
28	10005597	Fusible link valve	78	20476410	Intake pipe top
29	20476465	Access cover	79	20476490	Silicone sealant
30	20476401	Flue pipe	80	20476484	Fuel filter cartridge (BS-36UFF Type A)
31	20476469	Outer flange	81	17185384	Fuel filter cartridge (BS-36UFF Type B & C, OM-148)
32	20476471	Flange gasket	82	20476494	Installation manual (BS-36UFF Type A)
33	20476468	Inner flange	83	20476493	Installation manual (BS-36UFF Type B)
34	20476492	Flexible exhaust pipe	84	20476462	Installation manual (BS-36UFF Type C)
35	20476477	Hose band	85	20476694	Installation manual (OM-148 Type A)
36	20476475	Rubber joint	86	20476693	Installation manual (OM-148 Type B)
37	20476451	Inlet hose	87	20476495	Instruction manual (BS-36UFF Type A)
38	20476456	Screw for front panel	88	20476498	Instruction manual (BS-36UFF Type B)
39	20476447	Push nut	89	20476432	Instruction manual (BS-36UFF Type C)
40	20476450	Screw B1	90	20476695	Instruction manual (OM-148 Type A)
41	20476474	Washer B1	91	20476698	Instruction manual (OM-148 Type B)
42	17185362	Nut C3	92	20476499	Carton (BS-36UFF Type A)
43	20476452	Screw B2	93	20476429	Carton (BS-36UFF Type B)
44	20476453	Screw B3	94	20476428	Carton (BS-36UFF Type C)
45	20474050	Screw C	95	20476699	Carton (OM-148 Type A)
46	20476454	Screw B4	96	20476629	Carton (OM-148 Type B)
47	20476457	Screw B5			
48	20476146	Screw IE			
49	20476458	Screw B6			
50	20476459	Screw B7			

Note: BS-36UFF Type A 1997 model  
 BS-36UFF Type B contains 1998 modifications  
 BS-36UFF Type C contains 2006 modifications  
 OM-148 Type A 2001 model  
 OM-148 Type B 2006 modifications