




L A S E R H E A T I N G S Y S T E M S

Section 4

Troubleshooting

Laser 731 / Laser 732

4-3 Parts Description

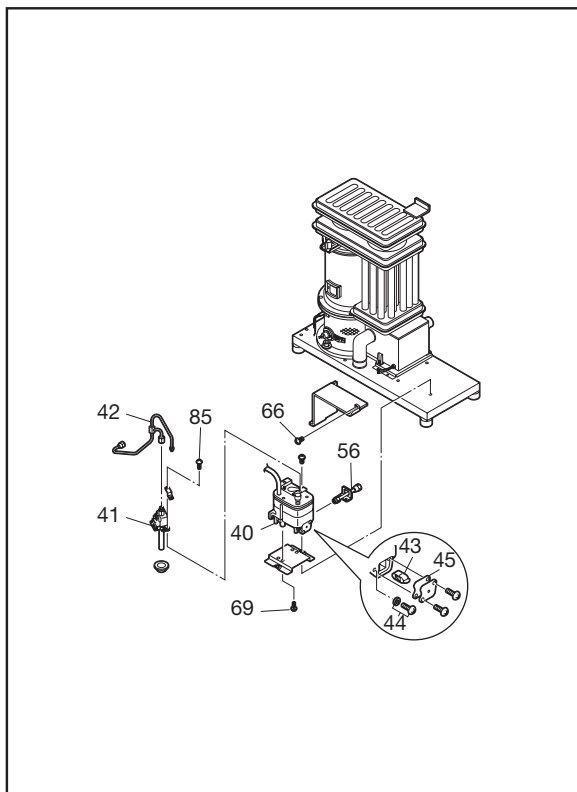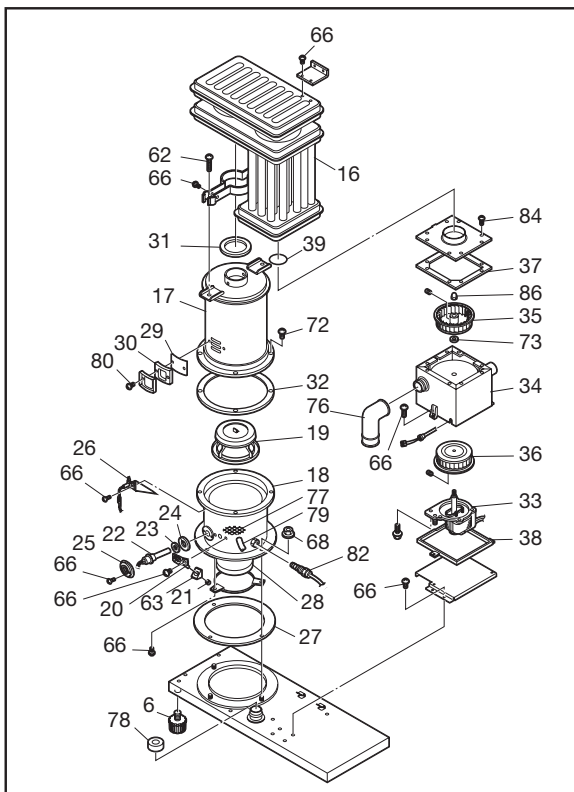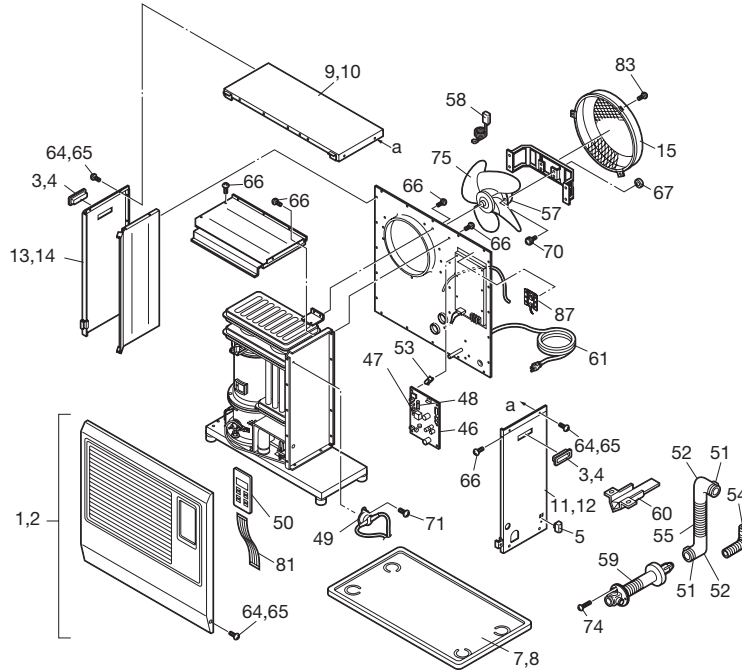

L732 stands for Laser 732

L A S E R H E A T I N G S Y S T E M S

Section 4

Troubleshooting

Laser 731 / Laser 732

4-3 Parts Description

REF #	PART #	PART NAME	REF #	PART #	PART NAME
1	20470646	Front panel assembly (L731)	47	20470678	Fuse 1 (5A)
2	20471046	Front panel assembly (L732)	48	20470679	Fuse 2 (10A)
3	20475804	Carrying handle (L731)	49	20470206	High limit switch
4	20479104	Carrying handle (L732)	50	20471376	Operation panel (L731)
5	20450007	Plumb bob	50	20471876	Operation panel (L732)
6	20474970	Adjustable leg	51	20474977	Hose band
7	20478129	Drip tray (L731)	52	20474975	L-shaped hose
8	20471029	Drip tray (L732)	53	20477414	PCB support
9	20470660	Top plate (L731)	54	20474984	Bent joint (L)
10	20471060	Top plate (L732)	55	20470651	Inlet hose
11	20470663	Right side panel (L731)	56	20470652	Leveler fuel pipe
12	20471063	Right side panel (L732)	57	20470669	Circulation fan motor
13	20470664	Left side panel (L731)	58	20478373	Thermistor
14	20471064	Left side panel (L732)	59	20479891	Flue pipe
15	20475172	Fan cover	60	20474925	Oil catch
16	20478644	Heat exchanger	61	20475535	Power supply cord
17	20475808	Heat chamber assembly	62	20478188	Screw 1X
18	20470642	Burner assembly	63	20479885	Outside nozzle gasket
19	20478643	Burner ring	64	20455862	Screw S2 (L731)
20	20478026	Fuel nozzle	65	20470756	Screw 4D (L732)
21	20478383	Fuel nozzle gasket	66	20470254	Screw 4J
22	20470218	Igniter	67	20474039	Insulator A
23	17187582	Igniter gasket	68	20474057	Flange nut
24	20479521	Igniter guide gasket	69	20470353	Screw 4P
25	20474920	Igniter cover	70	20470355	Screw 4Q
26	20470611	Primary flame rod	71	20450220	Screw 4I
27	20475194	Burner gasket	72	20478090	Screw 1T
28	20475850	Burner insulating pad	73	20476150	Washer E
29	20475831	Peep window	74	20474985	Screw 4G
30	20475881	Peep window gasket	75	20475171	Circulation fan
31	20474992	Joint packing	76	20474983	Outlet adapter
32	20475893	Heat exchanger gasket	77	20478613	Burner mat
33	20470638	Blower motor assembly	78	20478366	Air damper (ø25)
34	20470648	Blower motor assembly with case	79	20478683	Draft tube
35	20478871	Blower motor exhaust fan	80	20474163	Screw I
36	20475883	Blower motor intake fan	81	20470675	Ribbon cable
37	20475875	Blower motor case gasket	82	20470273	Burner thermistor
38	20475878	Rubber mat	83	20470666	Screw 4C
39	20475877	O-ring (ø75)	84	20475554	Screw 1Q
40	20470234	Fuel sump	85	20474053	Screw F
41	20470619	Fuel pump	86	20479957	Nut J
42	20470641	Fuel pipe assembly	87	20471101	WiFi module
43	20478550	Fuel inlet strainer	88	20471395	Instruction manual
44	20475551	Drain screw with O-ring	89	20471399	Carton (L731)
45	20475552	Strainer gasket	89	20471899	Carton (L732)
46	20471312	Main circuit board			

L732 stands for Laser 732